

AIRPORT DIAGRAM

AL-291 (FAA)

NORFOLK INTL (O.R.F)
NORFOLK, VIRGINIA

ATIS
127.15
NORFOLK TOWER
120.8 257.8
GND CON
121.9
CLNC DEL
118.5

D



JANUARY 2015
ANNUAL RATE OF CHANGE
0.0° W

FIELD
ELEV
27

ELEV 16
BLAST PAD
200 X 150

ILS HOLD
ILS CRITICAL AREA

ARRIVAL TERMINAL
INTERNATIONAL GATE

FUEL DISPENSING

FIRE STATION

36°54.0'N

NE-3, 02 MAR 2017 to 30 MAR 2017

ELEV 18
138.9°

DEPARTURE TERMINAL

8001 X 150

4875 X 150

AIR CARGO
U.S. CUSTOMS

LAHSO

FUEL FARM

36°53.5'N

NE-3, 02 MAR 2017 to 30 MAR 2017

ILS HOLD

ILS HOLD

318.9°

TWR 165

BLAST PAD
200 X 150

ELEV 18

ILS CRITICAL AREA

ELEV 22

GENERAL AVIATION AREA

RWY 05-23
PCN 54 R/B/X/T
S-150, D-200, 2S-175,
2D-350, 2D/2D2-475
RWY 14-32
PCN 19 F/C/X/T
S-75, D-100, 2S-127

36°53.0'N

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

76°12.5'W

76°12.0'W

76°11.5'W

AIRPORT DIAGRAM

NORFOLK, VIRGINIA
NORFOLK INTL (O.R.F)