

# AIRPORT DIAGRAM

BELLINGHAM INTL (BLI)  
BELLINGHAM, WASHINGTON

AL-45 (FAA)

ATIS  
134.45  
BELLINGHAM TOWER ★  
124.9 379.3  
GND CON  
127.4 379.3

**D**

ELEV  
163

9L

B

163.9°

48°48.0'N

RWY 16-34  
PCN 57 F/A/W/T  
S-75, D-160, 2D-250

CARGO

COMMERCIAL  
AIRCRAFT  
PARKING

COMMERCIAL  
TERMINAL

US  
CUSTOMS

TWR  
247

FBO/GENERAL AVIATION  
TERMINAL

TRANSIENT  
PARKING

GENERAL  
AVIATION  
HANGARS

FIRE  
STATION

HANGAR

NOTE: THIS AREA NOT VISIBLE  
FROM TOWER

FIELD  
ELEV  
171

34

343.9°

48°47.0'N

122°32.5'W


122°32.0'W

122°31.5'W

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READEBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

NW-1, 25 MAR 2021 to 22 APR 2021

NW-1, 25 MAR 2021 to 22 APR 2021

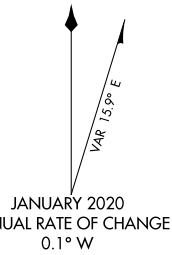

# AIRPORT DIAGRAM

BELLINGHAM, WASHINGTON  
BELLINGHAM INTL (BLI)